

## Printing from a Memory Storage Device or Scan Application


- 1 On the Home screen, press **[Print/Scan (Memory Storage Device)]**



- 2 On the Print/Scan (Memory Storage Device) screen, press **[Print from Storage Device]**



- 3 Insert a memory storage device in the media slot on the side of the control panel.

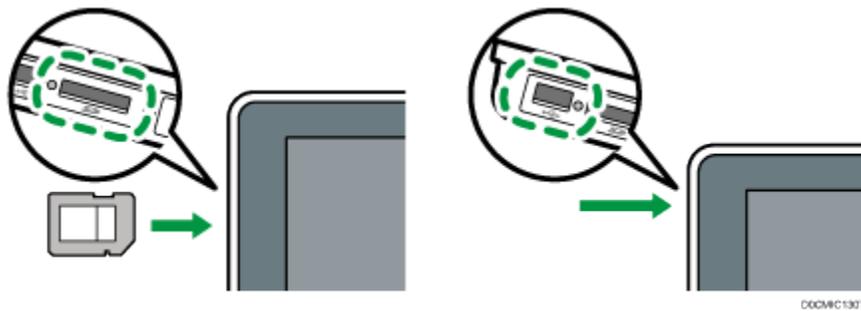


- 4 Press **[USB]** or **[SD Card]**.

- 5 Select the file to print.

Files in the external media are displayed as icons or thumbnail images.



- 6 Press **[Print Settings]** to specify the settings of 2-Sided Print or Finishing as necessary.

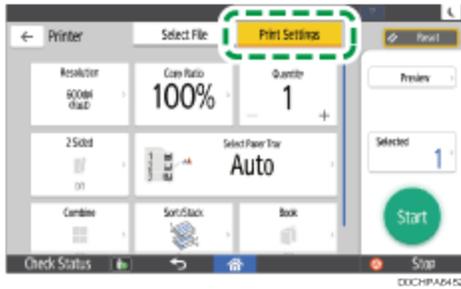

- Copy Ratio: Select whether to print in the original size or to reduce or enlarge to match the paper size.
- Quantity: Enter the print quantity.
- Resolution: Select the resolution of the image to print.
- Select Paper Tray: Select the paper tray.
- 2 Sided: Select the opening direction of the printed sheet.
- Combine: Select whether to combine multiple pages into a sheet.
- Sort/Stack: Select whether to print in ordered sets or in a batch page by page.
- Book: Select the opening direction of the Magazine binding. You can specify the setting of Magazine binding only when printing a file in the PDF/XPS format.
- **Staple: Select the staple position.**
- Punch: Select the punch position.
- Fold: Select the type of fold or printing side.

**7 Press [Start] to start printing.**